

**iBELL<sup>®</sup>**



**HAND BLENDER  
IBL HB960K**



# HAND BLENDER

## IBL HB960K



1. INTENDED USE.....	01
2. TECHNICAL SPECIFICATIONS.....	01
3. SAFETY INSTRUCTIONS.....	01
4. MEANING OF SYMBOLS.....	04
5. APPLIANCE COMPONENTS.....	05
6. KIT CONTENTS.....	06
7. USE.....	07
8. CLEANING AND CARE.....	11
9. REPAIR.....	12
10. STORAGE.....	12
11. RECYCLING AND TRANSPORTATION.....	12
12. CE DECLARATION.....	13



The appliance is intended for whipping, mixing and shredding food ingredients. Follow the instructions in this manual for safe installation and use of the appliance.

This appliance is intended for private indoor use only; it may not be used for commercial purposes.



Model	IBL HB960K
Power supply	220-240 V~, 50Hz
Power consumption	500 W



1. The appliance may be used by children and individuals with reduced physical, sensory or mental capabilities, or by individuals lacking the relevant experience and knowledge, provided that they are supervised or use the appliance safely, in compliance with the user's manual, and understand the hazards involved.
2. Children must not play with the appliance.
3. This appliance must not be used by children without supervision. Keep the appliance and its cord away from children.
4. Always unplug the appliance from the outlet if it is left unattended or before assembly, disassembly or cleaning.

5. The appliance is not intended for use by means of an external clock or a separate remote control system.
6. Read this manual thoroughly before first use.
7. Before connecting the appliance to a power source, make sure that the electric grid specifications correspond to the parameters indicated on the data plate.
8. The appliance should be connected to a 220-240 V~ 50/60 Hz mains.
9. When using electrical appliances, especially in the presence of children, basic safety precautions should be observed in order to avoid the risk of fire or electric shock.
10. This product is intended for household use only. Only use the appliance for its intended purposes.
11. To protect against electrical shock, do not immerse the power cord, plug, or appliance itself in water or any other liquid.
12. Do not let the cord hang over the edge of the worktop or sink.
13. Do not use the appliance near flammable fabrics (curtains, carpets), and do not place it near sources of heat: gas heaters, electric cookers.
14. Unwind the power cord before use.
15. The power cord should not hang freely or touch any hot surface.
16. Do not cover the appliance during operation. A fire could occur if the blender is covered or touching flammable material.
17. When using the appliance, never insert your hands or other objects (forks, knives etc.) into the ingredients being mixed.
18. Do not touch moving appliance components (rotating elements). Keep your fingers, hair and clothes away from all moving parts.
19. The appliance surfaces that come into contact with food should be washed in lukewarm water

with some mild detergent.

20. Regularly check the power cord for damage. If the power cord is damaged, it must be replaced by the manufacturer, an authorized service center or a qualified individual, so as to avoid hazards and injuries.
21. The blender must be supervised at all times when connected to a power source.
22. Do not operate the appliance when it is damaged or after it malfunctions.
23. Do not use the appliance if it has been dropped or any damage is visible.
24. Do not attempt to open the housing or remove any parts of the appliance.
25. Use only the included accessories.
26. Unplug the appliance before cleaning, replacing accessories or approaching moving parts during operation.
27. Never use the device continuously for more than 90 seconds. After this period, unplug the device from the outlet and wait about 2 minutes before switching it on again.
28. Warning! Risk of injury! Use the appliance only for its intended purpose. Beware the sharp cutting blades during operation and cleaning. Exercise caution when pouring hot liquids into the blender, because they could be splashed out unexpectedly.
29. Never direct the blades towards your or anyone else's face when you are operating the appliance.
30. Retain this manual and packaging, if possible.
31. If you intend to hand this appliance over to a third party, hand over this user's manual as well.
32. You can download a file containing this manual at:  
<http://instrukcje.vershold.com>.



Read this user's manual.



The product is compliant with the requirements of the applicable EU directives.



Recycling of waste electrical and electronic equipment - see the RECYCLING section of this user's manual.



Unplug the appliance.



Product suitable for contact with food.



The appliance is intended for indoor use.






Recycling code identifying the material from which the packaging is made – corrugated cardboard.



Trademark indicating that the manufacturer has made a financial contribution to the development and operation of a packaging materials recovery and recycling system.



Protection class II - in appliances of this protection class, protection against electric shock is ensured by adequate (double or reinforced) insulation, which is unlikely to fail.

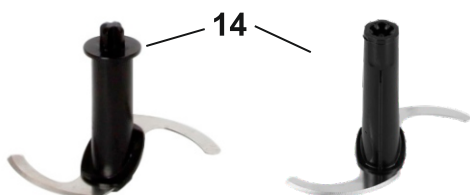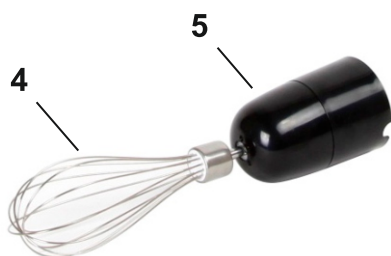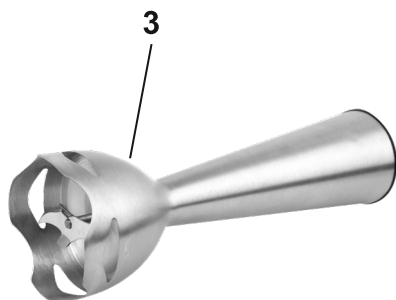

\*Optional accessories included

- |                                     |                                         |
|-------------------------------------|-----------------------------------------|
| 1. On switch and speed control knob | 8. Mini food processor container 0.6 l  |
| 2. Handle                           | 9. Pusher                               |
| 3. Grinding attachment              | 10. Maxi food processor lid             |
| 4. Whisk attachment                 | 11. Maxi food processor container 1.5 l |
| 5. Whisk                            | 12. Disc                                |
| 6. Container 0.6 l                  | 13. Disc extension spindle              |
| 7. Mini food processor lid          | 14. Blades                              |

1. Blender with power cord
2. 1 x Grinding attachment
3. 1 x Container 0.6 l
4. 1 x Whisk with attachment
5. 1 x Mini food processor container with lid 0.6 l
6. 1 x Maxi food processor container with lid 1.5 l
7. 2 x Blades
8. 1 x Pusher
9. 1 x Disc with disc extension spindle
10. 1 x User's manual

Open the packaging and carefully take out the appliance. Ensure that the package is complete and none of its contents are damaged. Check that plastic parts are not broken and the power cord is not damaged. If you find that any components are missing or damaged, contact the vendor and do not use the appliance. Retain the packaging or recycle it in accordance with local regulations.



**Attention! To keep children safe, do not leave packaging parts (plastic bags, cardboard boxes, expanded polystyrene elements etc.) freely accessible. Danger of suffocation!**



## 7.1 Before first use

- Unpack the appliance and remove all packaging elements.
- Check to ensure the power supply parameters correspond to the parameters of the local electrical grid.
- Before first use, clean the appliance and accessories in accordance with the instructions contained in section.

## 7.2 Speed control

The speed of rotation can be adjusted using the on switch and the speed control knob. To increase the speed of rotation, the on switch and the speed control knob must be pressed harder and harder. The stronger the pressure, the faster the speed.

To reduce the speed of rotation - release the pressure on the on switch and the speed controller knob.

## 7.3 Operating the blender with the grinding attachment

You may use the grinding attachment to prepare dips, sauces, soups, mayonnaise, baby meals and milk cocktails.

- Make sure that the appliance is unplugged.
- Mount the grinding attachment onto the blender by inserting the blender into the attachment and turning it clockwise to lock it.
- Prepare food ingredients in the 0.6 l container.
- Connect the appliance to 220-240V~ 50/60 Hz mains.
- Insert the grinding attachment into the container.
- Press and hold the on switch. To increase the speed, press harder on the switch.
- To disassemble, grasp the blender with both hands, one by the handle and the other by the grinding attachment. Then turn both parts in opposite directions.

The attachment should be facing down when removing / installing.



### **Attention!**

**Never use the appliance continuously for more than 90 seconds.**

**After this period, unplug the appliance from the outlet and wait about 2 minutes before switching it on again.**

**The temperature of the food being prepared should not exceed 35°C.**

**Unplug the appliance before replacing accessories or approaching moving parts during operation.**

**If the blades get jammed during operation, immediately release the**

**low speed or high speed button. Unplug the appliance and remove the cause of the jam. If you operate the appliance with the blades jammed, you may damage the blender.**



**The blades are sharp – exercise caution.**

#### **7.4 Operating the blender with the 0.6 l mini food processor**

In this configuration, use the blender to grind such products as: meat, cheese, onions, herbs, garlic, walnuts, almonds, prunes etc. Do not chop any hard products such as nutmeg, coffee beans or grain.

- Make sure that the appliance is unplugged.
- Fit blades on the spindle inside the 0.6 l container. The 0.6 l container should be placed on a flat, dry and stable surface.
- Insert the food ingredients into the 0.6 l container (do not exceed 2/3 of the container).
- Fit the container lid on the 0.6 l container.

**Attention!** The 0.6 l container edges and the container lid edges are profiled. Do not use force to connect these elements. If you feel any resistance, turn the 0.6 l container slightly. Do not use the appliance without the lid properly attached.

- Attach the container lid to the blender by inserting the blender into the hole in the lid and turning it clockwise to lock it.
- Connect the appliance to the 220-240V ~ 50/60 Hz mains. Press and hold the on switch. During operation, use one hand to hold the 0.6 l container and the other hand to hold the blender. After use, unplug the appliance.
- Remove the blender from the container lid by holding the cover with one hand and unscrewing the blender with the other.



**Attention!**

**Never use the appliance continuously for more than 90 seconds. After this period, unplug the appliance from the outlet and wait about 2**

**minutes before switching it on again.**

**The temperature of the meal being prepared should not exceed 35°C.**

**Unplug the appliance before replacing accessories or approaching moving parts during operation.**

**If the blades get jammed during operation, immediately release the low speed or high speed button. Unplug the appliance and remove the cause of the jam. If you operate the appliance with the cutting blades jammed, you may damage the blender.**



**The blades are sharp – exercise caution.**

### **7.5 Operating the blender with the 1.5 l maxi food processor**

In this configuration, use the blender to grind such products as: meat, cheese, onions, eggs, herbs, garlic, walnuts, stale bread, almonds, prunes etc.

The assembly method for the maxi food processor is similar to the assembly method for the mini food processor (see paragraph 7.5).

Use the maxi food processor to slice and grind such vegetables as: radish, carrots, potatoes etc. Use the disc for the grinding and slicing attachment for this purpose.

- Make sure that the appliance is unplugged.
- First put the shield extension on the protruding pin in the bowl, then put the shield on.
- When working with blades, apply the blades directly to the tang in the bowl.
- Attach the 1.5 l container lid.

**Attention!** Do not use the appliance without the lid properly attached.

- Attach the container lid with the blender by inserting the blender into the hole in the lid and turning it clockwise to lock it.
- Connect the appliance to an AC power outlet as specified on the appliance.
- Press and hold the on switch.
- Insert the ingredients into the pusher opening.
- During operation, use one hand to hold the 1.5 l container and the other hand to hold the blender.

**Attention!** Add ingredients through the hole in the lid and push them with the pusher. Do not use hands, forks, knives or other objects to push ingredients in.



**Attention!**

**Never use the appliance continuously for more than 90 seconds.**

**After this period, unplug the appliance from the outlet and wait about 2 minutes before switching it on again.**

- The temperature of the meal being prepared should not exceed 35°C.
- Unplug the appliance before replacing accessories or approaching moving parts during operation.
- If the blades get jammed during operation, immediately release the low speed or high speed button. Unplug the appliance and remove the cause of the jam. If you operate the appliance with the blades jammed, you may damage the blender.



- **The blades are sharp – exercise caution.**

- After use, unplug the appliance.
- Remove the blender from the container lid by holding the cover with one hand and unscrewing the blender with the other.
- Remove the container lid from the 1.5 l container.
- Take out the disc or blades carefully.

## **7.6 Operating the blender with the whisk**

In this configuration, you may prepare such dishes as: whipped cream, meringue, instant desserts.

- Make sure that the appliance is unplugged.
- Mount the beater attachment on the blender by inserting the blender into the attachment and turning it clockwise to lock it.
- Connect the whisk attachment to the whisk.
- Prepare food ingredients in the 0.6 l container.
- Connect the appliance to 220-240V~ 50/60 Hz mains.
- Insert the whisk into the 0.6 l container.
- Press and hold the on switch. To increase the speed, press the switch harder. To reduce RPM, reduce the pressure on the switch.
- After use, unplug the appliance.
- Remove the whisk from the whisk attachment.
- To disassemble, hold the blender with both hands, one by the handle and the other by the attachment of the beater. Then turn both parts in opposite directions. The attachment should be facing down when removing / installing.



### **Attention!**

**Never use the appliance continuously for more than 90 seconds.**

**After this period, unplug the appliance from the outlet and wait about 2 minutes before switching it on again.**

**The temperature of the meal being prepared should not exceed 35°C.**

**Unplug the appliance before replacing accessories or approaching moving parts during operation.**

## 8.1 Basic rules

Proper and regular cleaning will ensure safe operation and extend the useful life of the appliance.



**Warning!** Switch off the appliance, unplug it and let it cool down before cleaning and maintenance to avoid electric shock and burns.

1. It is recommended that the blender be wiped with a soft, damp cloth or paper towel and left to dry.
2. All other components should be washed in lukewarm water with some mild detergent.
3. Use a wooden or plastic spatula to remove stubborn food residues.
4. You may use a cotton swab to remove food residues from hard-to-reach places.



### **Attention!**

**Do not clean the appliance with any strong chemicals, alkali, abrasive or disinfecting agents, as they may damage the surface of the appliance.**

**Do not use sharp, coarse or metal cleaning tools, since they could damage appliance surfaces!**

**Do not immerse the blender or power cord in water or any liquid. Exercise caution when cleaning the appliance – the blades are sharp.**

The appliance contains no parts that could be serviced by the user. Do not attempt to repair the appliance on your own. Always have the appliance repaired by a professional.

If the blender cord is damaged, it must be replaced by the manufacturer, service centre or a qualified person.

- The appliance must be cleaned as described above and left until it is completely dry.
- Always store the appliance in a dry and well-ventilated room, beyond children's reach.
- During transportation, protect the appliance against vibration and shocks.

The packaging materials are 100% recyclable and are marked with a recycling symbol. The packaging should be recycled in accordance with local regulations. The packaging materials should be kept away from children, as the materials could pose a hazard.

### **Proper recycling of the appliance:**



1. According to WEEE Directive (2012/19/EU), the crossed-out wheeled bin symbol (shown on the left) is used to label all electric and electronic devices requiring segregation.
2. After the end of its useful lifetime, this product may not be disposed of as normal municipal waste – instead, it must be turned over to an electrical and electronic equipment collection and recycling point. That is indicated by the symbol of a wheeled bin placed on the product itself, in the user's manual or on the packaging.
3. The materials incorporated in the appliance can be recycled in accordance with their relevant markings. Thanks to recycling, re-use of materials or other forms of utilizing used equipment you make a significant contribution to the protection of our natural environment.

4. Information on the nearest waste electrical and electronic equipment collection location can be obtained from local government authorities or from the vendor of the appliance.

The appliance has been designed, manufactured and marketed in compliance with the LVD Directive and the EMC Directive. Therefore, the product bears the “CE” mark and has a declaration of conformity, which is available to market supervision agencies for inspection.

## Warranty card

1. Stamp .....
2. Date of sale .....
3. Signature .....
4. Device name .....
5. Device model .....
6. Serial No. or lot No. ....

## General terms and conditions of warranty

1. The Warrantor for this product warrants that within 24 months from the product purchase date confirmed with a duly completed warranty card, the product will be, at the discretion of the Warrantor, subject to:
  - a) free repair to be performed by the Warrantor, with the reservation that removed, damaged or faulty parts of the product shall become the property of the Warrantor in order to ensure the Customer's safety,
  - b) replacement with a new product at the point of product purchase, as a result of which the damaged or faulty product shall become the property of the Warrantor,
  - c) return in exchange for reimbursement of the product's purchase price, as a result of which the damaged or faulty product shall become the property of the Warrantor
2. A damaged product means a product failing to provide the features described in the Instruction Manual due to intrinsic properties of the device.
3. The Beneficiary under the warranty shall deliver the appliance to the Customer Service Point at a given store in order to submit a complaint about the equipment. When asserting your rights under warranty, you need to present a duly completed warranty card or a purchase receipt/invoice together with an as detailed as possible description of the device's defect, in particular of the external manifestations of the defect.
4. A warranty card without the vendor's stamp and signature and without the sale date is invalid.
5. The warranty excludes products with physical damage other than that caused by the manufacturer or distributor, including specially any damage resulting from incorrect usage or force majeure.
6. The warranty excludes products without the tamper-proof seal, unless an authorized Service employee has removed the seal.
7. The Service shall endeavour to complete the repair within 21 days. The said time limit may be extended to 1 month in the event that spare parts currently unavailable at the Service must be purchased.
8. To facilitate the repair, the product should be returned to the Service complete with all its original components.
9. This warranty for the sold consumer product does not exclude, restrict or suspend the rights of the buyer related to the regulations concerning implied warranty for defects pursuant to the Civil Code of 23 April 1964 (Journal of Laws Dz.U.2014.121).
10. Territorial scope of warranty coverage: the territory of the Republic of Poland.



iBELL<sup>®</sup> 